

## TV BRIDGE™ II Kits

Non-metallic pre-wired, pre-assembled box kits for flat screen TV installations.

### FEATURES AND BENEFITS

- Pre-wired for easy install
- Mounting wing screws hold the boxes secure against the wall
- Plugs and connections stay inside the recessed boxes so TV mounts flush against the wall
- No mess! - wires stay hidden behind the wall

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION	UNIT PKG	STD PKG
TVBRA1K	24180	w/ single-gang boxes	1	1
TVBRA2K	24181	w/ 2-Gang power/low voltage box	1	1
TVBRA3K	24195	2-Gang power/low voltage box	1	1
TVB712BK	12781	w/ 2-Gang power/low voltage box (power w/ angled opening)	1	1

\*Add suffix "GC" to Catalog # when ordering in Canada, for example TVBRA1KGC.

PATENTED.



Kits				
	TVBRA1K	TVBRA2K	TVBRA3K	TVB712BK
Contents	Single gang recessed box containing an outlet is connected to 7 feet of NM cable.  Second single gang recessed box connected to the NM cable and includes a pre-wired 4 foot 110V outlet plug, trim, and face plate.	Double gang recessed box containing low-voltage and power outlet connected to 7 feet of NM cable.  Second Double Gang recessed box containing low-voltage and power connected to the NM cable and includes a pre-wired 4 foot 110V outlet plug, trim plate and face plate.	Double gang recessed box containing low-voltage and power outlet connected to 7 feet of NM cable.  Second single gang recessed box connected to the NM cable and includes a pre-wired 4 foot 110V outlet plug, trim, and face plate.	Double gang recessed box containing low-voltage and an angled power outlet connected to 7 feet of NM cable.  Second Double Gang recessed box containing low-voltage and power connected to the NM cable and includes a pre-wired 4 foot 110V outlet plug, trim plate and face plate.


### Installation Instructions



Cut Top hole in wall for the TV.  
Cut Lower hole directly below the top hole, close to existing outlet.  
Drop the pre-wired device box assembly and cable through the top hole. Insert box and tighten wings.



Pull pre-wired device assembly through the bottom hole.

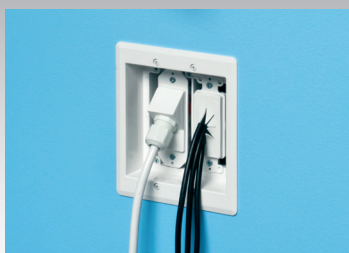

Attach device box to trim plate with screws provided. Secure trim plate to wall with mounting wing screws. Install CED130 in 2-Gang boxes. Pull cables.

