

## Metallic & Non-Metallic DROPIN™ Floor Box Kits

4" round UL Listed metallic and non-metallic floor box kits for existing floors. Designed for flush-to-floor, neat installations. Quickly install with a SINGLE hole saw, cover sits just 1/8" off the floor.

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION METAL COVER	UNIT PKG	STD PKG	DIM A	DIM B	WITH CARPET RING (DIM A)
<b>FLIP LIDS</b>							
FLB4360MB	00760	Brass	1	1	4.500	3.241	6.250
FLB4360NL	00761	Nickel plated brass	1	1	4.500	3.241	6.250
<b>THREADED PLUGS</b>							
FLB4362MB	09810	Brass	1	1	4.500	3.241	6.250
FLB4362NL	09812	Nickel plated brass	1	1	4.500	3.241	6.250
<b>FLOOR BOX KITS WITH NON-METALLIC BLANK COVERS</b>							
FLB4360BL	00762	Black	1	1	4.500	3.241	6.250
FLB4360BR	00763	Brown	1	1	4.500	3.241	6.250
FLB4360CA	00764	Caramel	1	1	4.500	3.241	6.250
FLB4360GY	00765	Gray	1	1	4.500	3.241	6.250
FLB4360LA	00766	Light Almond	1	1	4.500	3.241	6.250



Suffix 'GC' added for ground clip (Canada).

### FEATURES AND BENEFITS

- Five decorator colors: dark brown, light almond, gray, caramel, and black. Each with a matching non-metallic mounting bracket and carpet ring.
- Non-Metallic Blank Covers Perfect for covering unused receptacles. To use the receptacle simply remove the blank cover.
- Metal Covers Available in brass or Nickel plated brass with two flip lids that keep water out and protect the box.

### KITS INCLUDE

Non-metallic box, round 4" diameter metal gasketed cover with flip lids, threaded plugs, or non-metallic gasketed cover blank, non-metallic gasket support plate, gasket, UL listed 15 amp TR duplex receptacle, non-metallic mounting bracket and carpet ring, NM94 and NM95 cable connectors, (3) #8 x 1/2" flathead screws and (1) #6 x 1/2" screw.

### INSTALLATION INSTRUCTIONS



Scan For Video




KITS INCLUDE MATCHING CARPET RING

- 1) Determine box location, taking care to avoid structural framing members. Using hole saw cut 4-1/4" diameter opening through floor and sub floor.
- 2) Insert mounting bracket. Using indicator marks align bracket for proper receptacle orientation. Tighten (3) wing screws to secure bracket to floor.
- 3) Pull cable. Install in box with supplied cable connector. Attach box to bracket with (3) #8 x 1/2" sheet metal screws (supplied) through the U-shaped cut outs in the box flange.
- 4) Wire receptacle. Install in box. Attach supplied gasket support plate to receptacle with #6 x 1/2" screws.
- 5) Install gasket. Attach cover to box with (3) #8 1/2" flathead machine screws.



FLB4362NL

FLB4360MB

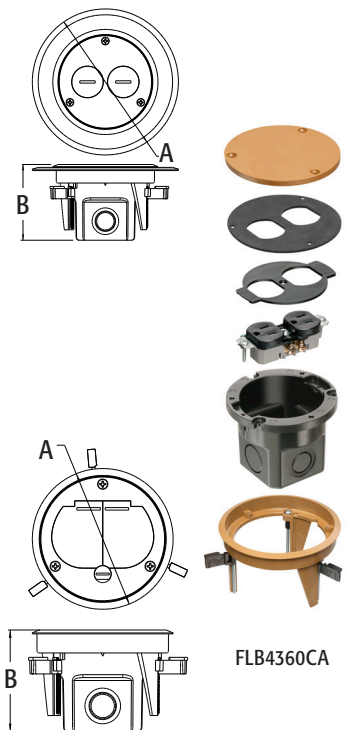

FLB4360CA



**COVER COLORS**  
Dark Brown, Light Almond, Gray, Caramel, Black