

Countertop Box Kits with Round Non-Metallic Box and Metal Trapdoor Cover

Non-metallic box. Round metal cover. Kits are available with a choice of three installed UL listed receptacles: tamper resistant (TR), tamper resistant (TR) GFCI, or combo receptacle with TR and two USB ports.

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION	UNIT/STD PKG	DIM A	DIM B	DIM C	DIM D
FLBT6520MB	22112	Non-metallic box with installed 20A TR receptacle, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520NL	22113	Non-metallic box with installed 20A TR receptacle, Round nickel plated trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520GMB	22110	Non-metallic box with installed 20A TR GFCI receptacle, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520GNL	22111	Non-metallic box with installed 20A TR GFCI receptacle, Round nickel plated trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520UMB	22056	Non-metallic box with installed 20A TR receptacle with 2 USB ports, Round brass trapdoor cover	1	5.887	2.219	3.500	6.001
FLBT6520UNL	22057	Non-metallic box with installed 20A TR receptacle with 2 USB ports, Round nickel plated trapdoor cover	1	5.887	2.219	3.500	6.001

PATENTED.



FEATURES AND BENEFITS

- Easy secure installation, spring clip holds box securely against the surface when screws are tightened
- Complies with NEC section 406.5 (E) for use in countertops or similar work surfaces
- Round trapdoor cover hides miscut openings and closes flush with countertop
- Fits granite or other countertop material up to 1-1/2" thick
- Easy 'no glue' installation

INSTALLATION INSTRUCTIONS



- 1) Determine box location. Cut a 5" diameter opening in countertop. Insert box, bending the clip as necessary to go through opening.
- 2) Secure box to countertop by tightening two #10 screws inside box...
- 3) (**underside of counter**)...drawing the box securely against the underside of the counter. **NO GLUING!**
- 4) Wire receptacle in accordance with National, State, and local codes.
- 5) Install trapdoor cover plate to box using the two #6-32 screws provided. Note: Round cover hides miscut openings.
- 6) Rotate box/cover assembly into position, lining it up parallel with the countertop and back splash.

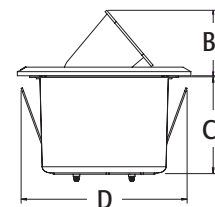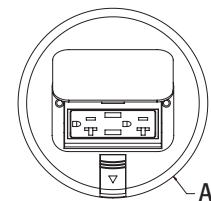

Scan For Video

