




Arlington Industries

1 Stauffer Industrial Park - Scranton, PA 18517
800-233-4717 Fax 570-562-0646
www.aifittings.com - Email: Sales@aifittings.com
Manufacturers of Quality Electrical Products



Arlington Cat# CT4 Series: Pop-up Countertop Receptacle Kit

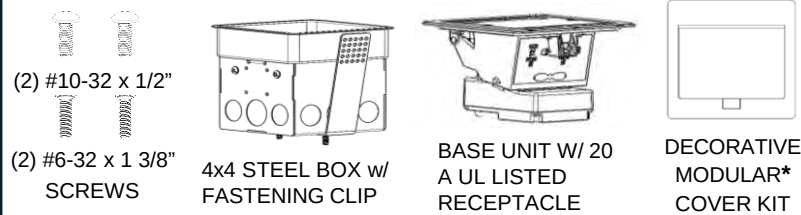


* OPTIONAL COMPONENT — SOLD SEPARATELY Included with select configurations.
Kit Includes: #1 - Button Cap, #2 - Frame Cover, #3 - Pop-up Cover, #4 - Removal Tool

WARNING: Make sure power is OFF at main panel box before installing.


The manufacturer warrants this product for material and workmanship only, and shall not be liable for any special, incidental, or consequential damages or for damages or loss caused by improper use or installation.

INSTALLATION INSTRUCTIONS


1. Cut hole 4 - 7/16" x 4 - 7/16" thru COUNTERTOP in desired location.
2. Push the STEEL BOX with FASTENING CLIP into hole. FASTENING CLIP will expand once the clip is past the COUNTERTOP. See Figures 1 & 2.

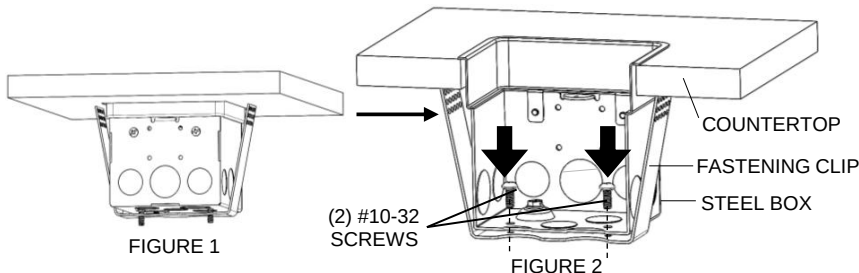

3. Pull cable and install in STEEL BOX using appropriate fitting (not supplied).
4. Secure STEEL BOX to COUNTERTOP by alternately tightening (2) #10-32 SCREWS inside the STEEL BOX, securing the FASTENING CLIP to the underside of COUNTERTOP. See Figure 2.
5. Remove the (2) 8 - 32 x 1 1/4" SCREWS securing the WHITE MODULAR FEMALE ELECTRICAL CONNECTOR underneath the BASE UNIT. See Figure 3.

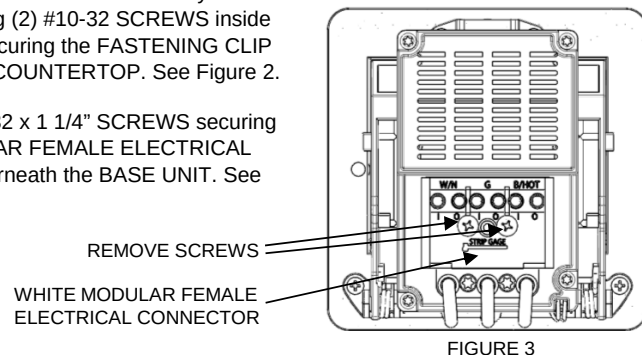


6. Remove WHITE MODULAR FEMALE ELECTRICAL CONNECTOR by squeezing WINGED TABS and pulling straight out from the BASE UNIT. See Figure 4.
7. Insert wires into respective holes and tighten RETAINING SCREWS. **Wire receptacle in accordance with National (NEC/CEC), state/province, and local codes.** See Figure 5.
8. Reinstall WHITE MODULAR FEMALE ELECTRICAL CONNECTOR into the bottom of the BASE UNIT and secure with (2) #8 - 32 x 1 1/4" SCREWS removed in step 5.
9. With POP-UP CLOSED - Install BASE UNIT to STEEL BOX using (2) #6-32 screws provided. See Figure 6.

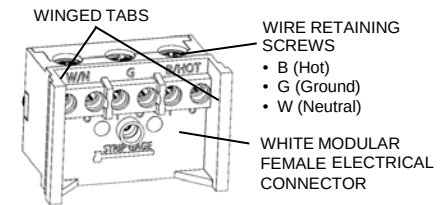

DECORATIVE MODULAR COVER KIT INSTALLATION - Steps 10-13



10. Install MODULAR BUTTON CAP: Align the edges of cover over BRASS BUTTON SHAFT and press the edges until the cover clicks into place. See Figure 1.
11. Install MODULAR FRAME COVER: With POP-UP closed - slide the hooked FRONT (button side) of the cover onto the FRONT edge of the BASE UNIT. The FRONT edge is marked on the bottom of the cover. Then **PRESS FIRMLY around all the outer edges of the cover, moving from the front to back, until CLICKS ARE HEARD from all of the edges and MODULAR FRAME COVER is flush to the COUNTERTOP around all edges of the BASE UNIT.**

INSTALL COVERS IN NUMBERED ORDER

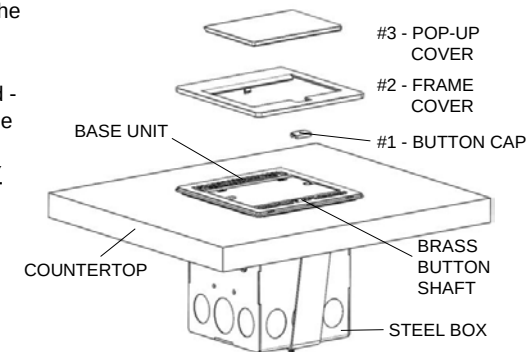


12. Raise POP-UP by pressing BUTTON.

13. Install MODULAR POP-UP COVER: Hook the FRONT edge of the cover onto FRONT EDGE OF POP-UP. FRONT edge is marked on the bottom of the cover. **PRESS FIRMLY on middle and rear edges of cover until TWO CLICKS ARE HEARD and the cover is flush with the MODULAR FRAME COVER when the POP-UP is closed.** To close the POP-UP, press the BUTTON and push down on the POP-UP. See Figures 2 & 3.

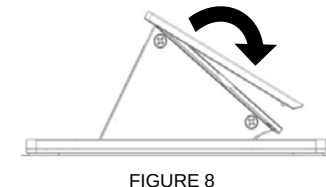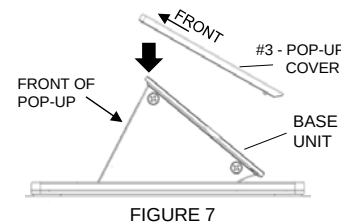

14. To Remove Cover: With POP-UP closed, insert REMOVAL TOOL into ANGLED GAP at the rear of POP-UP COVER. Push the tool down to pry off MODULAR POP-UP COVER. Then insert the REMOVAL TOOL tip into the rear notches of the MODULAR FRAME COVER. Push tool down to release the MODULAR FRAME COVER. Repeat on other notch. See Figure 4.

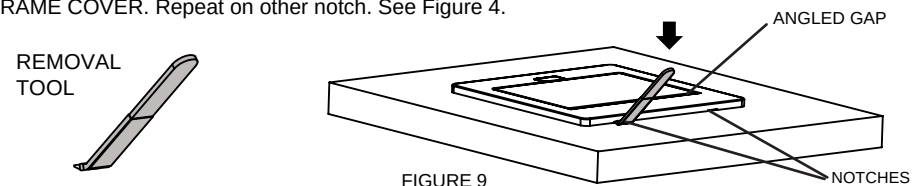

If you have any questions or if parts are missing, please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.