




Arlington Industries, Inc.

1 Stauffer Ind. Park - Scranton, Pa. 18517
800-233-4717 570-562-0646
www.aifittings.com - E-MAIL : sales @ aifittings.com
Manufacturers of Quality Electrical Products

WARNING: TURN OFF POWER AT MAIN PANEL BOX

Installation Instructions For : IN BOX™ DBVM2C & DBVM2W - STUCCO / MASONRY STYLE


Step #1

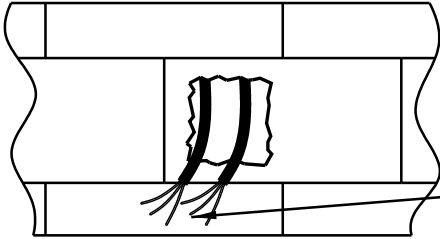

1. Cut Hole in Block.
Pull Wiring.


Lead Wires
9" Long

Step #2

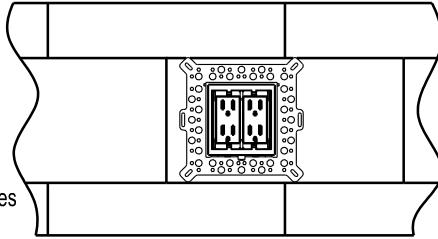

2. Fasten Recessed Box to Block with
Masonry Fasteners. Wire Device *


Step #3

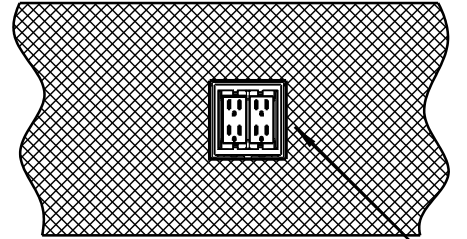

3. Mud Stucco Completely Around
Flange Area. Caulk As Needed

Installation Instructions For : IN BOX™ DBVS2C & DBVS2W - VINYL SIDING VERSION


Step #1

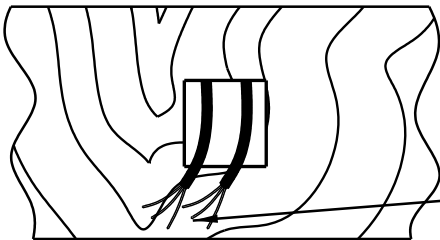

1. Cut Hole in Substrate.
Pull Wiring.


Lead Wires
9" Long

Step #2

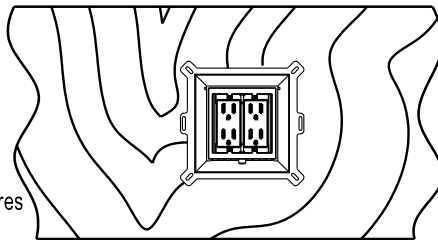

2. Install Recessed Box.
Wire Device *


Step #3

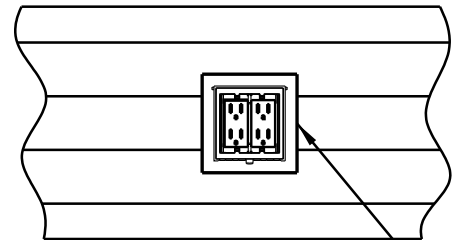

3. Install Siding.
Caulk As Needed

Installation Instructions For : IN BOX™ DBVR2C & DBVR2W (For : RETRO FIT STEPPED SIDING)


Step #1

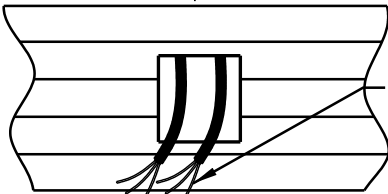

1. Cut Hole in Siding & Substrate. Pull Wiring.


Lead Wires
9" Long

Step #2

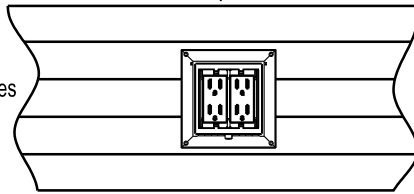

2. Install Recessed Box with Stainless Screws
Provided. Wire Device *

Step #3

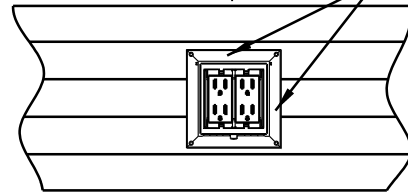


3. Caulk As Shown.

Caulk between
Flange and
Siding (4 sides)

(For : RETRO FIT FLAT SIDING / T111)


Step #1

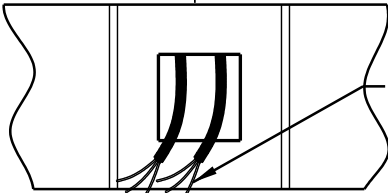

1. Cut Hole in Siding & Substrate. Pull Wiring.


Lead Wires
9" Long

Step #2

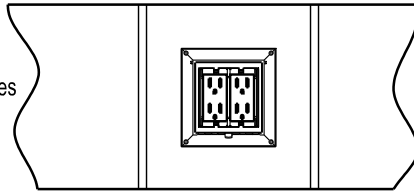

2. Install Recessed Box with Stainless Screws
Provided. Wire Device *

Step #3

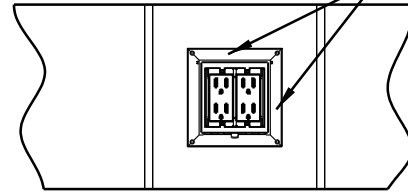

3. Caulk As Shown.

Caulk under
entire Flange
Surface

* Note: Connect the Wires and Install the Device according to manufacturer's instructions and Local and National Electrical Codes.



If you have any questions or if parts are missing, Please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.



TEMPLATE

CUT HOLE IN SUBSTRATE OR SIDING

