

WARNING: TURN OFF POWER AT MAIN PANEL BOX






Contents:

- (1) Inbox w/ Adjustable Flange
- (1) NM94 Connector
- (1) Duplex Coverplate
- (1) Decorator Coverplate
- (4) #6 x 1/2" Long Screws

Installation Instructions For:

DBVMA1 C & DBVMA1 W Vertical Adjustable IN-BOX

- 1. Determine location for Inbox and cut hole in substrate or block wall. (Template for cut-out on back of instruction sheet)
- 2. Determine final Foam/Stucco thickness and install Flange to Box with supplied screws, allowing 1/4" clearance between Cover hinge and finished wall surface. (See Illustration below)
- 3. Pull NM Cable and install cable in box with supplied NM94 fitting.
- 4. Install INBOX to substrate or block with appropriate fasteners (fasteners not included)
- 5. Mud stucco completely over flange area (Caulk as required)
- 6. Wire device per device manufacturer's instructions and in accordance with all applicable Local, State, and National Codes.

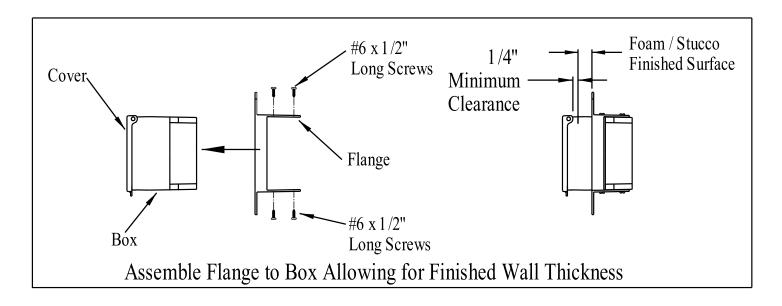

TEMPLATE

