


All wiring must be in accordance with National (NEC/CEC), State and Local Electrical Codes.

AI Cat # FLBC4580MB FLBC4580NL Color (BRASS) (NICKEL)



FLBC4580: Recessed Floorbox Kit w/ Decorator Style Receptacle & Keystone Holder

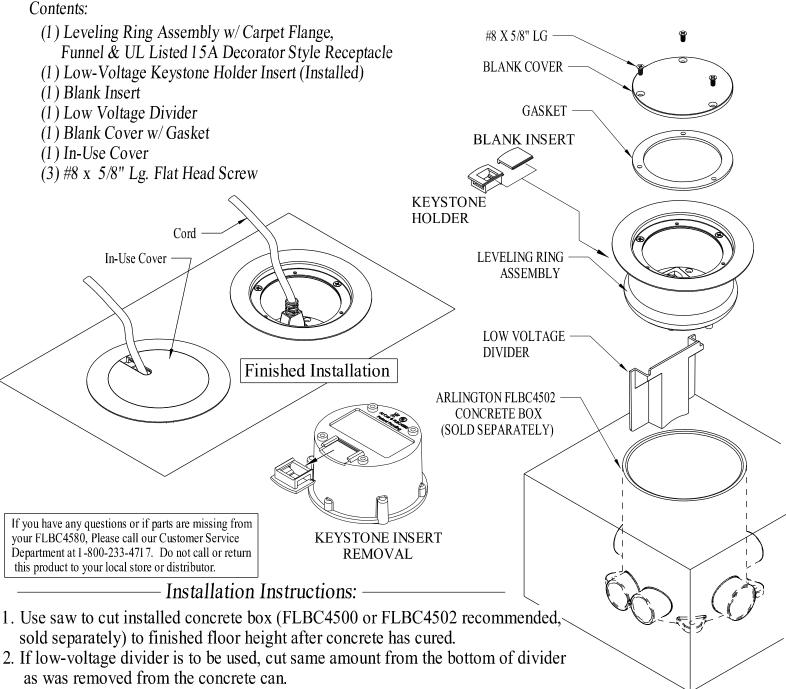

- 3. To use Blank Insert, Remove (4) #8 Screws from carpet flange to disassemble Leveling Ring Assembly. Slide Keystone Holder Insert outward to remove from Funnel. Install Blank Insert into Funnel and reinstall screws to reassemble Leveling Ring.
- 4. Wire receptacle. All wiring to be done in accordance with applicable National, State & Local Codes.
- 5. Seal underside of Flange with silicone sealant if desired (not included).
- 6. After installation of finished flooring, secure leveling ring assembly to installed Concrete Can using PVC cement
- 7. Option #1: Install Gasket & Blank Cover with (3) supplied #8 x 5/8" long flat head machine screws Option #2: Install In-Use cover... No screws required. Store Blank Cover with screws and gasket for future use.