

INSTALLATION INSTRUCTIONS


FLBR101 ADJUSTABLE FLOOR BOX

Contents:

- (1) FLBR101 non-metallic floor box
- (1) tamper-resistant ("TR") duplex receptacle
- (1) back plate
- (1) rectangular cover plate w/ gasket
- (5) #6-32 x 1/2" long screws
- (4) #6 drywall screws
- (2) threaded blanks
- (1) NM94 connector



(1) NM94 Connector




(4) #6 Drywall Screw



(5) #6-32 X 1/2" Long Screw

If you have questions or if parts are missing, from your FLBR101 please call Arlington's Customer Service Department at 1-800-233-4717. DO NOT CALL or RETURN PRODUCT to your LOCAL STORE or DISTRIBUTOR.

- 1 Determine location to install FLBR101 Floor Box, avoiding floor joist.
- 2 Cut a 2-5/16" x 4-1/8" hole in floor (template provided).
- 3 Install the NM94 connector in box. Pull cable through NM94 connector.
- 4 Install box to floor with (4) #6 drywall screws provided, through the (4) outer holes of the box.
- 5 Wire the TR receptacle and install it in box.
- 6 Install back plate using (1) #6-32 screw provided.
- 7 Install cover plate using (4) #6-32 screws provided. Install threaded blanks in cover plate.

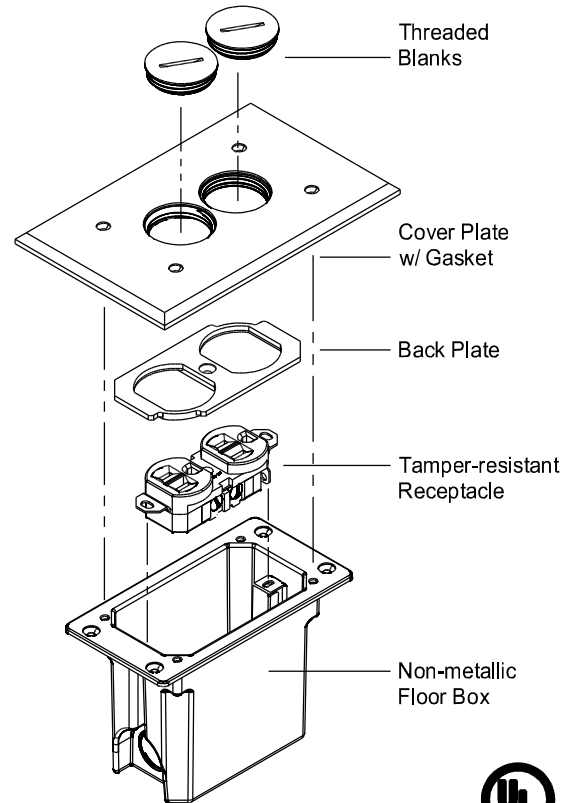

Wire receptacle per NEC, State and Local Codes.

The manufacturer warrants this product for material and workmanship only, and shall not be liable for any special incident or consequential damages or for damages or loss caused by improper use or installation.